



FCAR F3 Diagnosis list

Automaker:	Toyota
Software Version:	V5.0

Connector	Mode	System	Function						
			Version Information	Read DTC	Clear DTC	Data strea	Motion tests	Freeze frame	Remark(other functions)
	Powertrain	Engine and ECT	-	√	√	√	√	√	-
		Engine	-	√	√	√	√	√	-
		ECT	-	√	√	√	√	√	-
		Cruise Control	-	√	√	√	√	-	-
		Engine(LH Bank)	-	√	√	√	√	√	-
		Engine(RH Bank)	-	√	√	√	√	-	-
		HV Battery	-	√	√	√	√	√	-
		Hybrid Control	-	√	√	√	√	√	-
		Sequential M/T	-	√	√	√	√	√	-
		Stop And Go	-	√	√	√	√	√	-
		Multi-Mode M/T	-	√	√	√	√	√	-
		Radar Cruise	-	√	√	√	-	-	-
		Laser Cruise	-	-	-	-	-	-	-
		E-ACM	-	√	√	√	-	-	-
	Chassis	ABS/VSC/TRC	-	√	√	√	√	√	-
		AHC	-	√	√	√	√	-	-
		Air suspension	-	√	√	√	√	-	-
		Free-Tronic	-	√	√	√	√	-	-
		EHPS	-	√	√	√	-	√	-
		Transmission Control	-	√	√	√	√	√	-
		EMS	-	√	√	√	√	-	-
		Four Wheel Drive	-	√	√	√	√	-	-
		Tire Pressure Monitor	-	√	√	√	-	-	-



FCAR F3 Diagnosis list

Automaker:	Toyota
Software Version:	V5.0

Connector	Mode	System	Function						Remark(other functions)
			Version Information	Read DTC	Clear DTC	Data strea	Motion tests	Freeze frame	
OBD-II		VGRS	-	√	√	√	-	√	-
		Stabilizer	-	√	√	√	-	-	-
		Intelligent Parking Assist	-	√	√	-	-	-	-
		Electric Parking Brake	-	√	√	√	√	√	-
		Lane Keeping Aisst	-	√	√	√	-	-	-
		Front Stabilizer	-	√	√	√	√	-	-
		Rear Stabilizer	-	√	√	√	√	-	-
		AFS	-	√	√	√	√	-	-
		Air Conditioner	-	√	√	√	√	-	-
		Back Door	-	√	√	√	√	-	-
		BODY	-	√	√	√	√	-	-
		BODY2	-	√	-	√	√	-	-
		BODY3	-	√	-	√	√	-	-
		BODY4	-	√	-	√	√	-	-
		BODY5	-	-	-	√	√	-	-
		Clearance Sonar	-	√	√	√	√	-	-
		Combination Switch	-	-	-	√	-	-	-
		D-Door Motor	-	√	√	√	√	-	-
		D-SEAT SW	-	-	-	√	√	-	-
		Gateway	-	√	√	-	-	-	-
		METER	-	-	-	√	√	-	-
		Mirror	-	-	-	√	√	-	-
		Mirror L	-	-	-	√	√	-	-



FCAR F3 Diagnosis list

Automaker:	Toyota
Software Version:	V5.0

Connector	Mode	System	Function						Remark(other functions)
			Version Information	Read DTC	Clear DTC	Data strea	Motion tests	Freeze frame	
	BODY	Mirror R	-	-	-	√	√	-	-
		Occupant Detection	-	√	√	√	-	-	-
		P-Door Motor	-	√	√	√	√	-	-
		Passenger Seat	-	-	-	√	√	-	-
		Power Source Control	-	√	√	-	-	-	-
		Rain Sensor	-	-	-	√	-	-	-
		Rear Seat Switch	-	-	-	√	-	-	-
		RL-Door Motor	-	√	√	√	√	-	-
		Rear Left Seat	-	-	-	√	√	-	-
		RR-Door Motor	-	√	√	√	√	-	-
		Rear Right Seat	-	-	-	√	√	-	-
		Sliding Roof	-	-	-	√	√	-	-
		SRS Airbag	-	√	√	√	-	-	-
		Retractable Hardtop	-	√	√	√	-	-	-
		Steering Pad Switch	-	-	-	√	-	-	-
		Tilt&Telescopic	-	√	√	√	√	√	-
		Wiper	-	-	-	√	√	-	-
		Main Body	-	√	√	√	√	-	-
		Tvss	-	√	√	√	√	-	-
		Entry&Start	-	√	√	√	√	-	-
		HV Gateway	-	√	√	√	-	-	-
	Night View	-	√	√	√	√	-	-	
	HL AutoLeveling	-	√	√	√	√	-	-	



FCAR F3 Diagnosis list

Automaker:	Toyota
Software Version:	V5.0

Connector	Mode	System	Function						
			Version Information	Read DTC	Clear DTC	Data strea	Motion tests	Freeze frame	Remark(other functions)
		Gateway BEAN	-	√	√	-	-	-	-
		Accessory Gateway	-	√	√	√	-	-	-
		Rear Left Seat A/C	-	√	-	√	√	-	-
		Rear Right Seat A/C	-	√	-	√	√	-	-
		Gateway CAN	-	√	√	-	-	-	-
		ECM Gateway	-	√	√	√	-	-	-
		ECB Gateway	-	√	√	√	-	-	-
		WIL Gateway	-	√	√	√	-	-	-
		Center Console Switch	-	-	√	√	-	-	-
		Rear Console Switch	-	√	√	√	√	-	-
		Rear Left Seat A/C	-	√	-	√	√	-	-
		Rear Right Seat A/C	-	√	-	√	√	-	-
		Electric Power Control	-	√	√	√	√	√	-
		Active Headrest R	-	√	√	√	√	-	-
		Active Headrest L	-	√	√	√	√	-	-
		Combination Meter	-	√	√	√	√	-	-
		Immobiliser	-	√	√	√	√	-	1.KEY REGISTRATION 2.KEY CODE ERASURE 3.AUTO REG CLOSURE
		Pre-Crash	-	√	√	√	√	-	-
		Steering Lock	-	√	√	√	√	-	-

Remarks: √ means the system has this function - means not supported at this moment.